


TOSHIBA

AIR CONDITIONER (SPLIT TYPE) Installation Manual

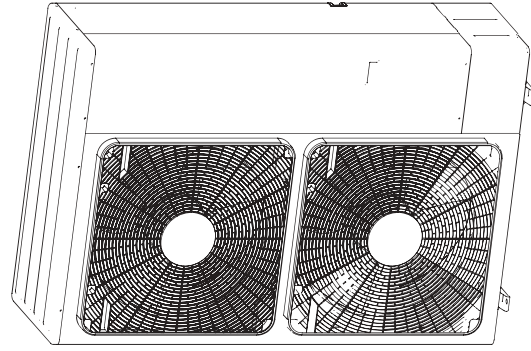

Outdoor Unit

Model name:

RAV-GP1103AT8P-E
RAV-GP1403AT8P-E
RAV-GP1603AT8P-E

For commercial use

Scan QR CODE to access installation and owner's manual on website.

<https://www.toshiba-carrier.co.th/manuals/default.aspx>

Manual are available in AR/BG/CS/DA/DE/EL/EN/ES/ET/FI/FR/

HR/HU/IT/LV/NL/NO/PL/PT/RO/RU/SK/SL/SV/TR.



1135801001

Original instruction

Please read this Installation Manual carefully before installing the Air Conditioner.

- This Manual describes the installation method of the outdoor unit.
- For installation of the outdoor unit, follow the Installation Manual attached to the outdoor unit.

ADOPTION OF R32 REFRIGERANT

This air conditioner adopts the HFC refrigerant (R32) which does not destroy the ozone layer.
This outdoor unit is designed exclusively for use with R32 refrigerant. Be sure to use in combination with a R32 refrigerant indoor unit.

Regulation of harmonic current

This equipment complies with IEC 61000-3-12 provided that the short-circuit power S_{sc} is greater than or equal to $S_{sc} (^{*}1)$ at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power S_{sc} greater than or equal to $S_{sc} (^{*}1)$.

$S_{sc} (^{*}1)$

Model	S_{sc} (kVA)
RAV-GP1103AT8P-E	1139
RAV-GP1403AT8P-E	1139
RAV-GP1603AT8P-E	1249

This unit complies with EN 61000-3-11.

However, the impedance of the power supply system to be connected to the unit at the incoming power point must be less than the Z_{max} given below.

In order to meet this condition, consult with the supply authority as required.

Model	Z_{max} (Ω)
RAV-GP1103AT8P-E	4.63
RAV-GP1403AT8P-E	4.63
RAV-GP1603AT8P-E	4.73


In addition, it is recommended that voltage drops occurring during the unit's operation in the area at the power input shall be around 3.3% of the nominal power-supply voltage or less.

Contents

1	Accessory parts	3
2	Installation of R32 refrigerant air conditioner	3
3	Installation conditions	4
4	Refrigerant piping	7
5	Air purging	10
6	Electrical work	13
7	Earthing	15
8	Finishing	15
9	Test run	15
10	Annual maintenance	15
11	Air conditioner operating conditions	15
12	Functions to be implemented locally	15
13	Troubleshooting	20
14	Appendix	20
15	Specifications	26
16	Installation check list	28

■ Center of gravity


(Unit : mm)

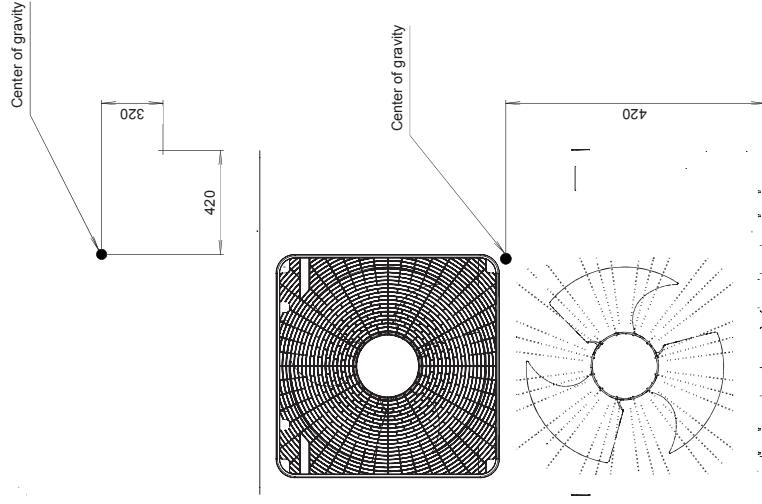

⚠ CAUTION

Cautions for outdoor unit installation space

- In the event that the outdoor unit is installed in a small space and refrigerant leaks, accumulation of highly concentrated refrigerant may cause a fire hazard. Therefore, be sure to follow the installation space instructions in the Installation Manual, and provide open space on at least one of the four outdoor unit sides.
- In particular, when both the discharge and intake sides face walls and obstacles are also placed on both sides of the outdoor unit, take steps to provide space wide enough for a person to pass (600 mm or more) on one side to prevent leaked refrigerant from accumulating.

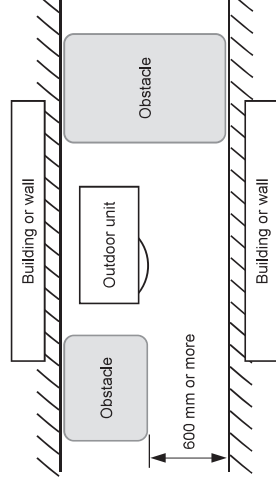

To disconnect the appliance from main power supply

- This appliance must be connected to the main power supply by means of a switch with a contact separation of at least 3 mm.

Do not wash air conditioners with pressure washers

- Electric leaks may cause electric shocks or fires.

1 Accessory parts

Part name	Q'ty	Shape	Usage
Installation Manual	1	Booklet	For hand this directly to the customer.
Drain nipple	1		
Waterproof rubber cap	5		
Protective bush	1		For protecting wires (pipe cover)
Guard material for passage part	1		For protecting passage part (pipe cover)
Safety Manual	1		For hand over directly to the customer.

2 Installation of R32 refrigerant air conditioner

⚠ CAUTION

R32 refrigerant air conditioner installation

- This air conditioner adopts the HFC refrigerant (R32) which does not destroy ozone layer. Therefore, during installation work, make sure that water, dust, former refrigerant, or refrigerant oil does not enter the R32 refrigerant air conditioner cycle. To prevent mixing of refrigerant or refrigerant oil, the sizes of connecting sections of charge port on the main unit and installation tools are different from those of the conventional refrigerant units.
- Accordingly, special tools are required for the R32 or R410A refrigerant units. For connecting pipes, use new and clean piping materials with high pressure fittings made for the R32 or R410A only, so that water and/or dust does not enter.
- When using existing piping, refer to “14. Appendix - [1] Existing piping”.

■ Required Tools/Equipment and Precautions for use

Prepare the tools and equipment listed in the following table before starting the installation work.
Newly prepared tools and equipment must be used exclusively.

Legend

- △ : Conventional tools (R32 or R410A)
⊙ : Prepared newly (Use for R32 only)

Tools / equipment	Use	How to use tools / equipment
Gauge manifold	Vacuuming / charging refrigerant and operation check	△ Conventional tools (R410A)
Charging hose		△ Conventional tools (R410A)
Charging cylinder	Can not be used	Unusable (Use the electronic refrigerant charging scale)
Gas leak detector	Charging refrigerant	△ Conventional tools (R32 or R410A)
Vacuum pump	Vacuum drying	△ Conventional tools (R32 or R410A) △ Usable if the backflow prevention adapter is installed.
Vacuum pump with backflow prevention function	Vacuum drying	△ Conventional tools (R32 or R410A)
Flare tool	Flare machining of pipes	△ Conventional tools (R410A)
Bender	Bending pipes	△ Conventional tools (R410A)
Refrigerant recovery equipment	Refrigerant recovery	△ Conventional tools (R32 or R410A)
Torque wrench	Tightening flare nuts	△ Conventional tools (R410A)
Pipe cutter	Cutting pipes	△ Conventional tools (R410A)
Refrigerant cylinder	Charging refrigerant	⊙ Prepared newly (Use for R32 only)
Welding machine and nitrogen cylinder	Welding pipes	△ Conventional tools (R410A)
Electronic refrigerant charging scale	Charging refrigerant	△ Conventional tools (R32 or R410A)

Refrigerant piping

R32 refrigerant



- Incomplete flaring may cause refrigerant gas leakage.
- Do not re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.

Use the following item for the refrigerant piping.
Material : Seamless phosphorous deoxidized copper pipe.
Ø6.35, Ø9.52, Ø12.7 Wall thickness 0.8 mm or more
Ø15.88 Wall thickness 1.0 mm or more

REQUIREMENT

- When the refrigerant pipe is long, provide support brackets at intervals of 2.5 to 3 m to clamp the refrigerant pipe.
- Otherwise, abnormal sound may be generated.

3 Installation conditions

Before installation

Be sure to prepare to the following items before installation.

Length of refrigerant pipe

Length of refrigerant pipe connected to indoor/outdoor unit	Height difference (Indoor-outdoor)		Item
	Indoor unit: Upper	Outdoor unit: Lower	
3 to 100 m	30 m	30 m	Addition of refrigerant at the local site is unnecessary for refrigerant pipe lengths up to 30 m. If the refrigerant pipe length exceeds 30 m, add refrigerant in the amount given in "Charging additional refrigerant".

- * Caution during addition of refrigerant. Charge the refrigerant accurately. Overcharging may cause serious trouble with the compressor.
- Do not connect a refrigerant pipe that is shorter than 3 m. These may cause a malfunction of the compressor or other devices.

Airtight test

- Before starting an airtight test, further tighten the spindle valves on the gas and liquid sides.
- Pressurize the pipe with nitrogen gas charged from the service port to the design pressure (4.15 MPa) to conduct an airtight test.
- After the airtight test is completed, evacuate the nitrogen gas.

Air purge

- To purge air, use a vacuum pump.
- Do not use refrigerant charged in the outdoor unit to purge air. (The air purge refrigerant is not contained in the outdoor unit.)

Electrical wiring

- Be sure to fix the power wires and indoor/outdoor connecting wires with clamps so that they do not come into contact with the cabinet, etc.

Earthing



WARNING

Make sure that proper earthing is provided. Improper earthing may cause an electric shock. For details on how to check earthing, contact the dealer who installed the air conditioner or a professional installation company.

- Proper earthing can prevent charging of electricity on the outdoor unit surface due to the presence of a high frequency in the frequency converter (inverter) of the outdoor unit, as well as prevent electric shock. If the outdoor unit is not properly earthed, you may be exposed to an electric shock.
- Be sure to connect the earth wire, (grounding work) Incomplete grounding can cause an electric shock. Do not connect ground wires to gas pipes, water pipes, lightning rods or ground wires for telephone wires.

Test run

Turn on the leakage breaker at least 12 hours before starting a test run to protect the compressor during startup.



CAUTION

Incorrect installation work may result in a malfunction or complaints from customers.

■ Installation location

⚠ WARNING

Install the outdoor unit properly in a location that is durable enough to support the weight of the outdoor unit.

Insufficient durability may cause the outdoor unit to fall, which may result in injury.

This outdoor unit has a weight of about 117 kg. Pay special attention when installing the unit onto a wall surface.

⚠ CAUTION

Do not install the outdoor unit in a location that is subject to combustible gas leaks.

Accumulation of combustible gas around the outdoor unit may cause a fire.

Install the outdoor unit in a location that meets the following conditions after the customer's consent is obtained.

- A well-ventilated location free from obstacles near the air intakes and air discharge.
- A location that is not exposed to rain or direct sunlight.
- A location that does not increase the operating noise or vibration of the outdoor unit.
- A location that does not produce any drainage problems from discharged water.

Do not install the outdoor unit in the following locations.

- A location with a saline atmosphere (coastal area) or one that is full of sulfide gas (hot-spring area) (Special maintenance is required).
- A location subject to oil, vapor, oily smoke, or corrosive gases.
- A location in which organic solvent is used.
- Places where iron or other metal dust is present. If iron or other metal dust adheres to or collects on the interior of the air conditioner, it may spontaneously combust and start a fire.
- A location where high-frequency equipment (including inverter equipment, private power generator, medical equipment, and communication equipment) is used (Installation in such a location may cause malfunction of the air conditioner, abnormal control or problems due to noise from such equipment).
- A location in which the discharged air of the outdoor unit blows against the window of a neighboring house.
- A location where the operating noise of the outdoor unit is transmitted.
- When the outdoor unit is installed in an elevated position, be sure to secure its feet.
- A location in which drain water poses any problems.


⚠ CAUTION

1 Install the outdoor unit in a location where the discharge air is not blocked.


2 When an outdoor unit is installed in a location that is always exposed to strong winds like a coast or on the high stories of a building, secure normal fan operation by using a duct or wind shield.

3 When installing the outdoor unit in a location that is constantly exposed to strong winds such as on the upper stairs or rooftop of a building, apply the wind-proofing measures referred to in the following examples.

1. Install the unit so that its discharge port faces the wall of the building.
Keep a distance 500 mm or more between the unit and wall surface.

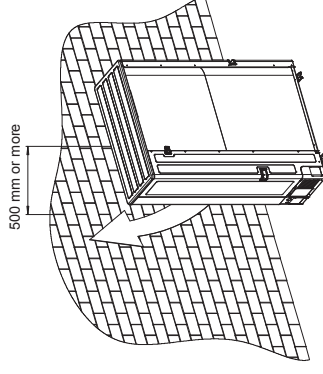


2. Consider the wind direction during the operational season of the air conditioner, and install the unit so that the discharge port is set at a right angle relative to the wind direction.

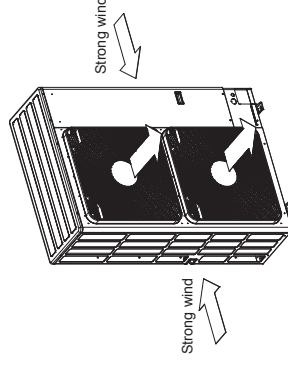

3. When installing the unit in an area where snowfalls may be heavy, take steps to prevent the unit from being adversely affected by the fallen or accumulated snow.
 - Either make the foundation higher or install a stand (which is high enough to ensure that the unit will be above the fallen or accumulated snow) and place the unit on it.
 - Attach a snow shield (locally procured).


<Example>

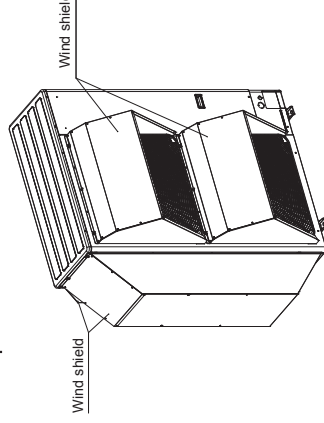


■ Necessary space for installation (Unit: mm)

Single unit installation


When there is an obstacle on the back side (Front, sides, and top are free)

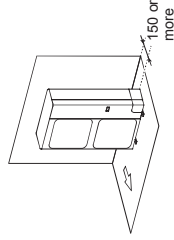


When there is an obstacle on the front side (Back, sides, and top are free)

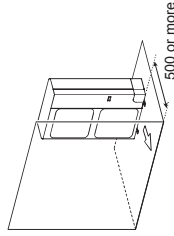


When there are obstacle on the front and back side (Sides and top are free)

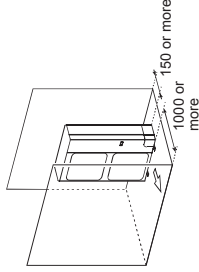

When there are obstacles on the top and front sides (Back and sides are free)

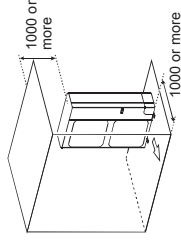


When there are obstacles on the back and top sides (Front and sides are free)

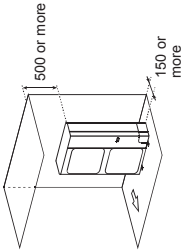

When there are obstacles on the back and sides (Front and top are free)


* The height of the obstacle should be lower than that of the outdoor unit.

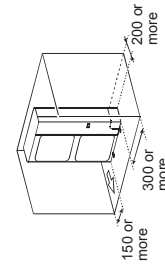


Serial unit installation

* When the outdoor temperature is high, the cooling capability may be decreased because of an equipment protection operation.


When there is an obstacle on the back side (Front, sides, and top are free)

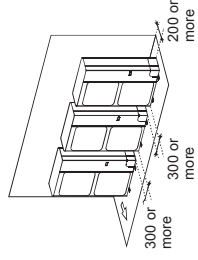

When there are obstacles on the back and top sides (Front and sides are free)

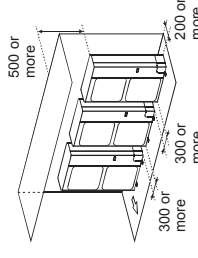


When there is an obstacle on the front side (Back, sides, and top are free)

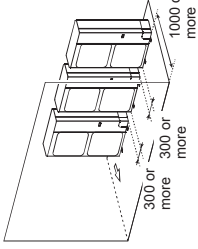


When there are obstacles on the back and sides (Front and top are free)

* The height of the obstacle should be lower than that of the outdoor unit.

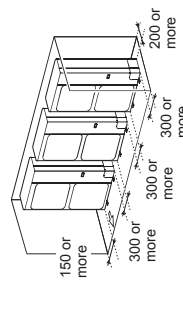


When there are obstacles on the front and back sides (Sides and top are free)

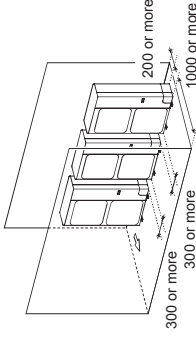


Single unit multiple-row installation (Top and both sides are free)

* The height of the obstacle should be lower than that of the outdoor unit.

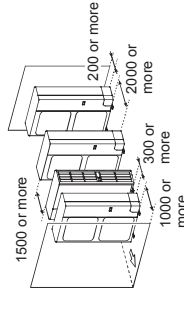

Multiple unit multiple-row installation (Top, both sides, and front are free)



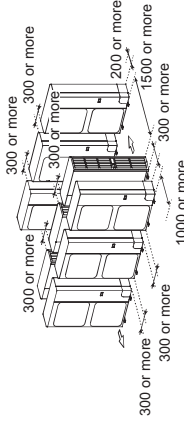


- Before installation, check the strength and horizontalness of the base so that abnormal sounds do not emanate.
- According to the following base diagram, fix the base firmly with the anchor bolts.

Technical drawing of the front view of a rectangular plate. The overall dimensions are 542 mm in height and 483 mm in width. The drawing includes several labeled features and dimensions:

- Drain nipple mounting hole:** Indicated by a label and a leader line pointing to a hole on the left side.
- Drain hole:** Indicated by a label and a leader line pointing to a hole on the right side.
- Dimensions:**
 - Overall height: 542
 - Overall width: 483
 - Distance from top edge to the first horizontal line: 173
 - Distance from the first horizontal line to the second horizontal line: 173
 - Distance from the second horizontal line to the bottom edge: 173
 - Distance from the left edge to the first vertical line: 173
 - Distance from the first vertical line to the second vertical line: 173
 - Distance from the second vertical line to the right edge: 173

- As shown in the figure below, install the foundation and vibration-proof rubber pads to directly support the bottom surface of the fixing leg that is in contact with and underneath the bottom plate of the outdoor unit.
- * When installing the foundation for an outdoor unit with downward piping, consider the piping work.

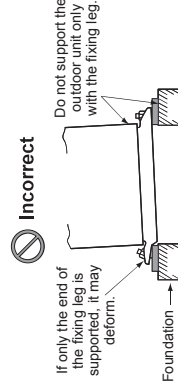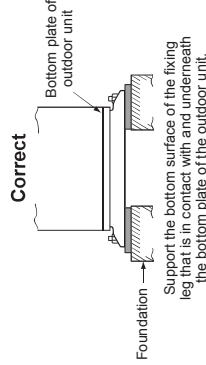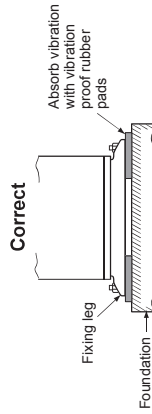

- When water is to be drained through the drain hose, attach the following drain nipple and waterproof rubber cap, and use the drain hose (Inner dia.: 16 mm) sold on the market. Also seal knockout hole and the screws securely with silicone material, etc., to prevent water from leaking.
- Some conditions may cause dewing or dripping of water.
- When collectively draining discharged water completely, use a drain pan.



If a heating operation is to be continuously performed for a long time under the condition that the outdoor temperature is 0°C or lower, draining defrosted water may be difficult due to the bottom plate freezing.

It is recommended to procure an anti-freeze heater locally in order to safely install the air conditioner. For details, contact the dealer.

- **Be sure to install the outdoor unit in a place able to bear its weight.**
If strength is insufficient, the unit may fall down resulting in human injury.
- **Perform specified installation work to protect against strong wind and earthquakes.**
If the outdoor unit is imperfectly installed, an accident by falling or dropping may be caused.

■ Refrigerant piping


- Material : Seamless phosphorous deoxidized copper pipe.**

Ø6.4, Ø9.5, Ø12.7 Wall thickness 0.8 mm or more
 Ø15.9 Wall thickness 1.0 mm or more.
 Do not use any copper pipes with a wall
 thickness less than these thicknesses.

- Remove the screws at 3 locations and slide the service panel down. Next, detach the right-side claws followed by left-side claws to remove the service panel.


When doing this, pulling the service panel towards the front could damage the claws.


When attaching the service panel, attach the left claws followed by the right claws and lift the service panel upwards and secure it with screws in the 3 locations.

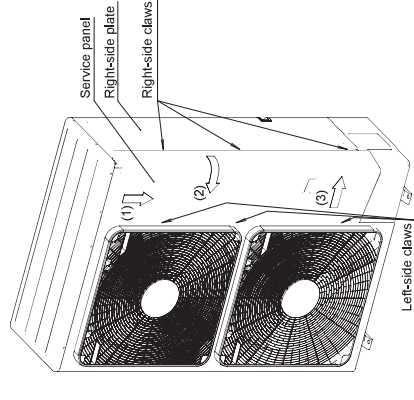


- The indoor / outdoor connecting pipes can be connected in 4 directions.
Take off the knockout part of the pipe cover through which pipes or wires will pass through the base plate.
 - Detach the pipe cover and tap on the knockout section a few times with the shank of a screwdriver. A knockout hole can easily be punched.
 - After punching out the knockout hole, remove burrs from the hole and then install the supplied protective bush and guard material around the passage hole to protect wires and pipes.
- Be sure to attach the pipe covers after pipes have been connected. Cut the slits under the pipe covers to facilitate the installation.
- After connecting the pipes, be sure to mount the pipe cover. The pipe cover is easily mounted by cutting off the slit at the lower part of the pipe cover.

Knockout procedure

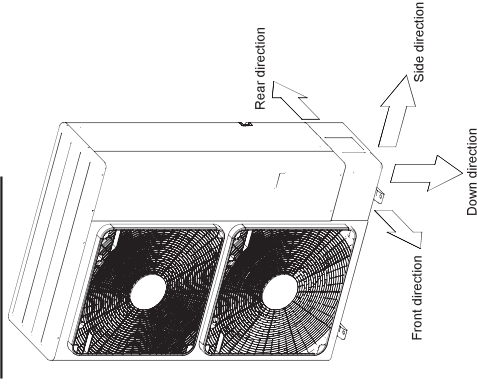

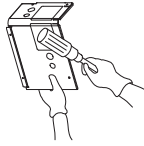

- * Be sure to wear heavy work gloves while working.

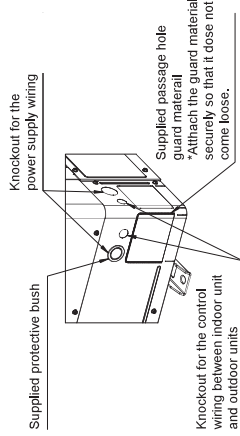

Optional installation parts (Locally procured)

	Parts name	Q'ty
A	Refrigerant piping Liquid side: Ø9.5 mm Gas side: Ø13.9 mm	One each
B	Pipe insulating material (polyethylene foam, 10 mm thick)	1
C	Putty, PVC tape	One each

Refrigerant piping connection

CAUTION

Take note of these 4 important points below for piping work.


1. Keep dust and moisture away from inside the connecting pipes.
2. Tightly connect the connection between pipes and the unit.
3. Evacuate the air in the connecting pipes using a VACUUM PUMP.
4. Check for gas leaks at connection points.

Piping connection

Liquid side	
Outer diameter	Thickness
Ø9.5 mm	0.8 mm
Gas side	
Outer diameter	Thickness
Ø15.9 mm	1.0 mm (half hard)

Flaring

- 1 Cut the pipe with a pipe cutter.**
Be sure to remove burrs that may cause a gas leak.
- 2 Insert a flare nut into the pipe, and then flare the pipe.**
Use the flare nuts supplied with the air conditioner or those for R32.
Insert a flare nut into the pipe, and flare the pipe.
Use the flare nuts supplied with the air conditioner or flare nuts for R32 or R410A.
However, the conventional tools can be used by adjusting the projection margin of the copper pipe.
Projection margin in flaring: B (Unit: mm)



RIDGID (Clutch type)

Outer dia. of copper pipe	R32 or R410A tool used	Conventional tool used
9.5	0 to 0.5	1.0 to 1.5
15.9		

Flaring dia. size: A (Unit: mm)



Outer dia. of copper pipe	A
9.5	+0 -0.4
15.9	13.2 19.7

CAUTION

- Do not scratch the inner surface of the flared part when removing burrs.
- Flare processing under the condition of scratches on the inner surface of flare processing part will cause refrigerant gas leak.
- Check that the flared part is not scratched, deformed, stepped, or flattened, and that there are no chips adhered or other problems, after flare processing.
- Do not apply refrigerating machine oil to the flare surface.

REQUIREMENT


- Before proceeding to brazing the refrigerant pipe, be sure to pass nitrogen through the pipe to prevent oxidation inside it. If nitrogen is not passed through the pipe, the refrigerating cycle may become dogged by oxidized scales.

Tightening of connecting part

- 1 Align the centers of the connecting pipes and fully tighten the flare nut with your fingers.**
Then fix the nut with a wrench as shown in the figure and tighten it with a torque wrench.
- 2 As shown in the figure, be sure to use two wrenches to loosen or tighten the flare nut of the valve on the gas side. If you use a single crescent, the flare nut cannot be tightened to the required tightening torque.**
On the other hand, use a single crescent to loosen or tighten the flare nut of the valve on the liquid side.


(Unit: N·m)

Outer dia. of copper pipe	Tightening torque
9.5 mm (diam.)	34 to 42 (3.4 to 4.2 kgf·m)
15.9 mm (diam.)	63 to 77 (6.3 to 7.7 kgf·m)

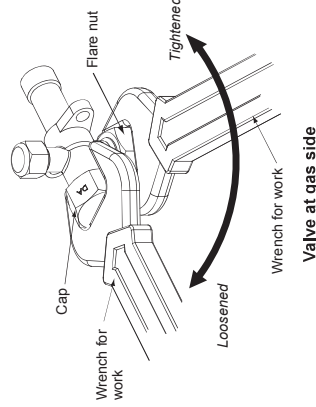


CAUTION

- Do not put the crescent wrench on the cap or cover. The valve may break.
- If applying excessive torque, the nut may break according to some installation conditions.



Incorrect

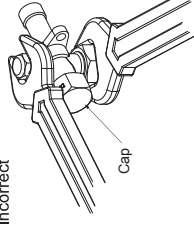

- After the installation work, be sure to check for gas leaks of the pipe connections with nitrogen.
- Therefore, using a torque wrench, tighten the flare pipe connecting sections that connect the indoor/outdoor units at the specified tightening torque.
- Incomplete connections may cause not only a gas leak, but also trouble with the refrigeration cycle.

Do not apply refrigerant oil to the flared surface.


■ Refrigerant pipe length

Single

Allowable pipe length (m)		Height difference (m)	
Total length ℓ		Indoor-outdoor H	
Minimum	Maximum	Indoor unit: Upper	Outdoor unit: Upper
3	100	30	30

Pipe diameter (mm)		Number of bent portions
Gas side	Liquid side	
Ø15.9	Ø9.5	10 or less

Figure of Single

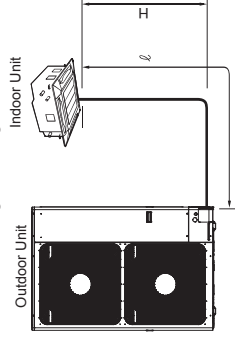

Simultaneous twin, triple

System	Outdoor unit	Allowable pipe length (m)				Height difference (m)	
		Total length • $\ell_1 + \ell_2$ • $\ell_1 + \ell_3$ • $\ell_2 + \ell_3$ Maximum	Branch piping • $\ell_1 - \ell_2$ • $\ell_1 - \ell_3$ • $\ell_2 - \ell_3$ Maximum	Branch piping • $\ell_1 + \ell_2$ • $\ell_1 + \ell_3$ • $\ell_2 + \ell_3$ Maximum	Indoor unit: Upper	Outdoor unit: Upper	Indoor-outdoor (Δh)
Twin	GP1103	100	20	10	30	30	0.5
	GP1403	100	20	10	30	30	0.5
Triple	GP1603	100	20	10	30	30	0.5
	GP1603 (Only)	100	20	10	30	30	0.5

System	Outdoor unit	Pipe diameter (mm)				Number of bent portions	
		Main pipe	Branch piping		Liquid side	Gas side	Indoor-outdoor (Δh)
		Gas side	Liquid side	Gas side			
Twin	GP1103	Ø15.9	Ø9.5	Ø12.7	Ø6.4	Ø6.4	10 or less
	GP1403	Ø15.9	Ø9.5	Ø12.7	Ø6.4	Ø6.4	10 or less
Triple	GP1603	Ø15.9	Ø9.5	Ø15.9	Ø9.5	Ø9.5	10 or less
	GP1603 (Only)	Ø15.9	Ø9.5	Ø12.7	Ø6.4	Ø6.4	10 or less

Figure of Simultaneous twin


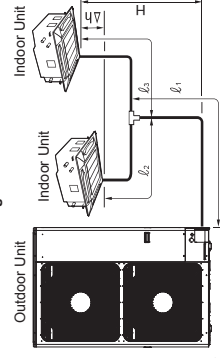


Figure of Simultaneous triple

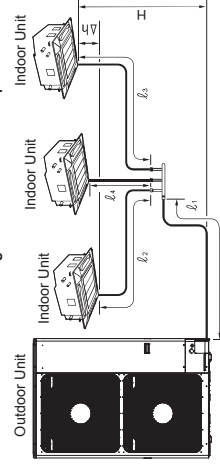


Simultaneous double twin

Outdoor unit	Allowable pipe length (m)				Height difference (m)	
	Total length • $\ell_1 + \ell_2 + \ell_3$ • $\ell_1 + \ell_2 + \ell_4$ • $\ell_1 + \ell_3 + \ell_4$ Maximum	Branch piping • $\ell_1 - \ell_2$ • $\ell_1 - \ell_3$ • $\ell_1 - \ell_4$ Maximum	Branch piping • $\ell_2 + \ell_3$ • $\ell_2 + \ell_4$ • $\ell_3 + \ell_4$ Maximum	Branch piping • $\ell_2 + \ell_3$ • $\ell_2 + \ell_4$ • $\ell_3 + \ell_4$ Maximum	Indoor-outdoor H	Indoor-outdoor (Δh)
GP1603	100	15	20	6	30	0.5

Outdoor unit	Pipe diameter (mm)				Number of bent portions	
	Main pipe	Branch piping		Liquid side	Gas side	Indoor-outdoor (Δh)
	Gas side	Liquid side	Gas side			
GP1603	Ø15.9	Ø9.5	Ø15.9	Ø9.5	Ø15.9	10 or less


Figure of Simultaneous double twin

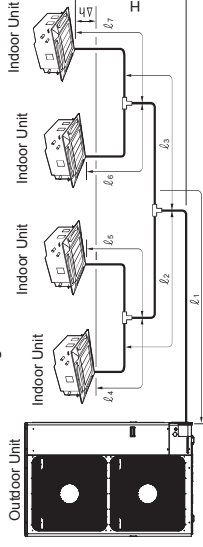

5 Air purging

Airtight test

After completing the refrigerant piping work, perform an airtight test. Connect a nitrogen gas cylinder and pressurize the pipes with nitrogen gas as follows to conduct the airtight test.

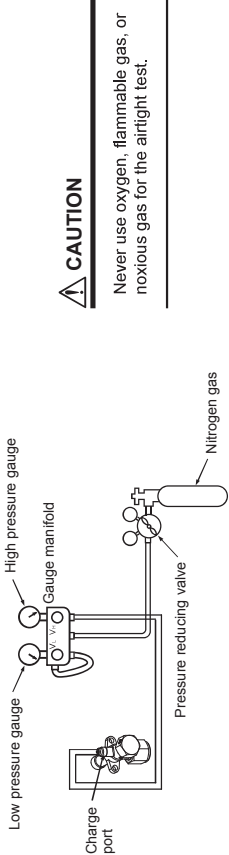

Gas leak check

- Step 1.....Pressurize to **0.5 MPa** (5 kg/cm²G) for 5 minutes or longer.
- Step 2.....Pressurize to **1.5 MPa** (15 kg/cm²G) for 5 minutes or longer.
- Step 3.....Pressurize to **4.15 MPa** (42 kg/cm²G) for 24 hours. Micro leaks can be discovered. (However, note that when the ambient temperature differs during pressurization and after 24 hours, the pressure will change by approximately 0.01 MPa (0.1 kg/cm²G) per 1°C, so this should be compensated.)

If the pressure drops in steps 1 through 3, check the connections for leakage. Check for leaks with foaming liquid, etc., take steps to fix the leaks such as brazing the pipes again and tightening the flare nuts, and then perform the airtight test again.

* After the airtight test is completed, evacuate the nitrogen gas.


Air purge

With respect to the preservation of the terrestrial environment, adopt "Vacuum pump" to purge air (Evacuate air in the connecting pipes) when installing the unit.

- Do not discharge the refrigerant gas to the atmosphere to preserve the terrestrial environment.
- Use a vacuum pump to discharge the air (nitrogen, etc.) that remains in the set. If air remains, the capacity may decrease.

For the vacuum pump, be sure to use one with a backflow preventer so that the oil in the pump does not pump stops.

(If oil in the vacuum pump is put in an air conditioner including R32, it may cause trouble with the refrigeration cycle.)

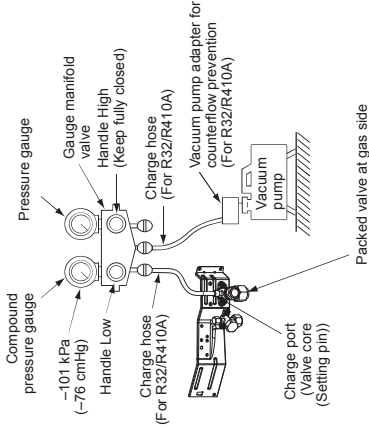

Vacuum pump

As shown in the figure, connect the charge hose after the manifold valve is closed completely.

Attach the connecting port of the charge hose with a projection to push the valve core (setting pin) to the charge port of the set.

Open Handle Low fully.

Turn ON the vacuum pump. (*1)

Loosen the flare nut of the packed valve (Gas side) a little to check that the air passes through. (*2)

Retighten the flare nut.

Execute vacuuming until the compound pressure gauge indicates -101 kPa (-76 cmHg). (*1)

Close Handle Low completely.

Turn OFF the vacuum pump.

Leave the vacuum pump as it is for 1 or 2 minutes, and check that the indicator of the compound pressure gauge does not return.

Open the valve stem or valve handle fully. (First, at liquid side, then gas side)

Disconnect the charge hose from the charge port.

Tighten the valve and caps of the charge port securely.

*1: Use the vacuum pump, vacuum pump adapter, and gauge manifold correctly referring to the manuals supplied with each tool before using them. Check that the vacuum pump oil is filled up to the specified line of the oil gauge.

*2: When air is not charged, check again whether the connecting port of the discharge hose, which has a projection to push the valve core, is firmly connected to the charge port.

Pump down process

- Turn off the Air Conditioner system.
- Connect the charge hose from the manifold valve to the service port of the packed valve at gas side.
- Turn on the Air Conditioner system in cooling operation more than 10 minutes.
- Check the operating pressure of the system should be normal value. (Ref. with product specification)
- Release the valve rod cap of both service valves.
- Use the Hexagon wrench to turning the valve rod of Liquid side fully close. (*Make sure no entering air into the system)
- Continue operate Air Conditioner system until the gauge of manifold dropped into the range of $0.5 - 0 \text{ kgf/cm}^2$
- Use the Hexagon wrench to turning the valve rod of Gas side fully close. And turn off the Air Conditioner system immediately thereafter.
- Remove the gauge manifold from the service port of the packed valve.
- Securely tighten the valve rod cap to the both service valves.

CAUTION

Should be check the compressor operating condition while pumping down process. It must not any abnormal sound, more vibration. It is abnormal condition appears and must turn off the Air Conditioner immediately.

How to open the valve

Fully open the valves of the outdoor unit. (First fully open the valve on the liquid side, and then fully open the valve on the gas side.)


- Do not open or close the valves when the ambient temperature is -20°C or less. Doing so may damage the valve O-rings and result in refrigerant leakage.

Liquid side

Open the valve with a 4 mm hexagon wrench.

Gas side

Open the valve with a 5 mm hexagon wrench.

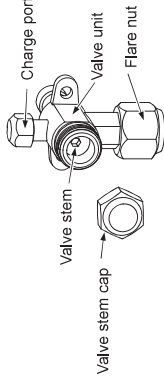

Valve handling precautions

- Open the valve stem until it strikes the stopper.
- Securely tighten the cap with a torque wrench.

Cap tightening torque

Valve size	$\varnothing 9.5\text{ mm}$	34 to 42 N•m (3.4 to 4.2 kgf•m)
	$\varnothing 15.9\text{ mm}$	34 to 42 N•m (3.4 to 4.2 kgf•m)
Charge port	14 to 18 N•m (1.4 to 1.8 kgf•m)	

Insulating the Pipes

- The temperatures at both the liquid side and gas side will be low during cooling so in order to prevent condensation, be sure to insulate the pipes at both of these sides.
- Insulate the pipes separately for the liquid side and gas side.
- Insulate the branch pipes by following the instructions in the installation manual provided with the branch pipe kit.

REQUIREMENT

Be sure to use an insulating material which can withstand temperatures above 120°C for the gas side pipe since this pipe will become very hot during heating operations.

Replenishing refrigerant

This model is a 30 m chargeless type that does not need to have its refrigerant replenished for refrigerant pipes up to 30 m. When a refrigerant pipe longer than 30 m is used, add the specified amount of refrigerant.

Refrigerant replenishing procedure

1. After vacuuming the refrigerant pipe, close the valves and then charge the refrigerant while the air conditioner is not working.
2. When the refrigerant cannot be charged to the specified amount, charge the required amount of refrigerant from the charge port of the valve on the gas side during cooling.

Requirement for replenishing refrigerant

Replenish liquid refrigerant.
When gaseous refrigerant is replenished, the refrigerant composition varies, which disables normal operation.

Charging additional refrigerant

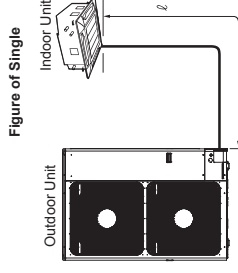


Figure of Simultaneous Twin

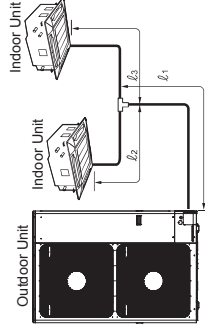


Figure of Simultaneous Triple


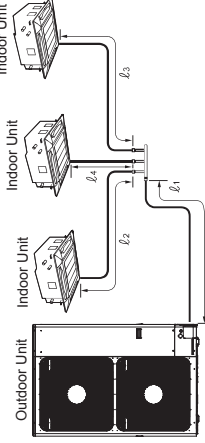


Figure of Simultaneous double Twin

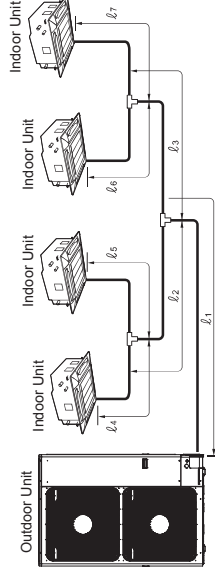

Formula for calculating the amount of additional refrigerant
(Formula will differ depending on the diameter of the liquid connecting side pipe.)
* ℓ_1 to ℓ_7 are the lengths of the pipes shown in the figures above (Unit: m).

Single

Diameter of connecting pipe (liquid side)	Amount of additional refrigerant per meter (g/m)	Amount of additional refrigerant (g) = Amount of refrigerant charged for main pipe
$\varnothing 9.5$	α	$\alpha \times (\ell - 30)$
	35	

Simultaneous twin

Outdoor unit	Diameter of connecting pipe (liquid side)			Amount of additional refrigerant per meter (g/m)	Amount of additional refrigerant (g) = Amount of refrigerant charged for main pipe + amount of refrigerant charged for branch piping
	ℓ_1	ℓ_2	ℓ_3	α	β
GP1103, GP1403	$\varnothing 9.5$	$\varnothing 6.4$	$\varnothing 6.4$	35	20
GP1603	$\varnothing 9.5$	$\varnothing 9.5$	$\varnothing 9.5$	35	35
	$\alpha \times (\ell_1 - 28) + \beta \times (\ell_2 + \ell_3 - 4)$				

Simultaneous Triple

Outdoor unit	Diameter of connecting pipe (liquid side)				Amount of additional refrigerant per meter (g/m)	Amount of additional refrigerant (g) = Amount of refrigerant charged for main pipe + amount of refrigerant charged for branch piping
	ℓ_1	ℓ_2	ℓ_3	ℓ_4	α	β
GP1603	$\varnothing 9.5$	$\varnothing 6.4$	$\varnothing 6.4$	$\varnothing 6.4$	35	20
	$\alpha \times (\ell_1 - 28) + \beta \times (\ell_2 + \ell_3 + \ell_4 - 6)$					


Simultaneous double twin

Outdoor unit	Diameter of connecting pipe (liquid side)			Amount of additional refrigerant per meter (g/m)			Amount of additional refrigerant (g) = Amount of refrigerant charged for main pipe + Amount of refrigerant charged for first branch piping + amount of refrigerant charged for second branch piping
	ℓ_1	ℓ_2, ℓ_3	ℓ_4 to ℓ_7	α	β	γ	
GP1603	Ø9.5	Ø9.5	Ø6.4	35	20	20	$\alpha \times (\ell_1 - 28) + \beta (\ell_2 + \ell_3 - 4) + \gamma \times (\ell_4 + \ell_5 + \ell_6 + \ell_7)$

Gas leak inspection

Use a leak detector manufactured specially for HFC refrigerant (R32, R410A, R134a, etc.) to perform the R32 gas leak inspection.

- * Leak detectors for conventional HCFC refrigerant (R22, etc.) cannot be used, as the sensitivity drops to approximately 1/40 when used for HFC refrigerant.
- * R32 has a high working pressure, so failure to perform the installation work properly may result in gas leaks such as when the pressure rises during operation. Be sure to perform leak tests on the piping connections.

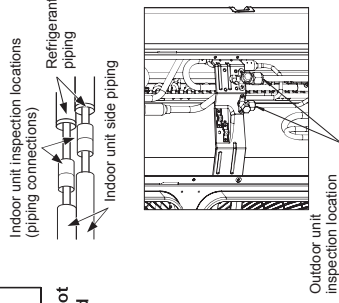

To Fix the Fluorinated Greenhouse Gases Label

This product contains fluorinated greenhouse gases. Do not vent gases into the atmosphere.

Contains fluorinated greenhouse gases	
• Chemical Name of Gas	R32
• Global Warming Potential (GWP) of Gas	675

CAUTION

1. Stick the enclosed refrigerant label adjacent to the service ports for charging or recovering location and where possible adjacent to existing nameplates or product information label.
2. Clearly write the charged refrigerant quantity on the refrigerant label using indelible ink. Then, place the included transparent protective sheet over the label to prevent the writing from rubbing off.
3. Prevent emission of the contained fluorinated greenhouse gas. Ensure that the fluorinated greenhouse gas is never vented to the atmosphere during installation, service or disposal. When any leakage of the contained fluorinated greenhouse gas is detected, the leak shall be stopped and repaired as soon as possible.
4. Only qualified service personnel are allowed to access and service this product.
5. Any handling of the fluorinated greenhouse gas in this product, such as when moving the product or recharging the gas, shall comply under (EU) Regulation No.517/2014 on certain fluorinated greenhouse gases and any relevant local legislation.
6. Periodical inspections for refrigerant leaks may be required depending on European or local legislation.
7. Contact dealers, installers, etc., for any questions.

Fill in the label as follows:

Refrigerant Label

Contains fluorinated greenhouse gases.

Pre-charged refrigerant at factory [kg] specified in the nameplate.

Additional charge on installation site [kg].

Total quantity of refrigerant in tonnes CO₂ equivalent.

Caution: Write out charge amount (1), (2), (3) and (4) by indelible means on installation site.

R32 GWP:675

① = kg

② = kg

①+② = kg

③ = kg

①+②+③ = t

Pre-charged refrigerant at factory [kg], specified in the nameplate

Additional charge on installation site [kg]

$\frac{\text{GWP} \times \text{kg}}{1000}$

6 Electrical work

⚠ WARNING

- 1 Using the specified wires, ensure that the wires are connected, and fix wires securely so that the external tension to the wires does not affect the connecting part of the terminals.

Incomplete connection or fixation may cause a fire, etc.

- 2 Be sure to connect the earth wire. (Grounding work)
Incomplete earthing may lead to electric shock.


Do not connect earth wires to gas pipes, water pipes, lightning rods or earth wires for telephone wires.

- 3 The appliance shall be installed in accordance with national wiring regulations.
Capacity shortages of the power circuit or an incomplete installation may cause an electric shock or fire.

⚠ CAUTION

- An installation fuse must be used for the power supply line of this air conditioner.
- Incorrect / incomplete wiring may lead to an electrical fire or smoke.
- Prepare an exclusive power supply for the air conditioner.
- This product can be connected to the mains power. Fixed wire connections:
A switch that disconnects all poles and has a contact separation of at least 3 mm must be incorporated in the fixed wiring.
- Be sure to use the cord clamps attached to the product.
- Do not damage or scratch the conductive core or inner insulator of the power and indoor/outdoor connecting wires when peeling them.
- Use the power and system indoor/outdoor connecting wires with specified thicknesses, specified types and protective devices required.


- Remove the service panel, and the terminal cover.
- A conduit pipe can be installed through the hole for wiring. If the hole size does not fit the wiring pipe to be used, drill the hole again to an appropriate size.
- Be sure to clamp the power wires and indoor/outdoor connecting wires with a cord clamp along the connecting pipe so that the wires do not touch the compressor or discharge pipe. (The compressor and the discharge pipe become hot.)

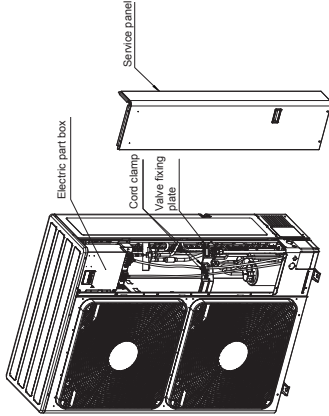

■ Wiring between indoor unit and outdoor unit

The dashed lines show on-site wiring.

Input power
380-415V 3N~ 50Hz,
380V 3N~ 60Hz

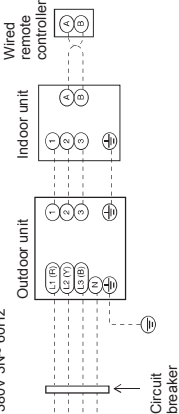

* (Recommendation Earth leakage circuit breaker)

- Connect the system interconnection wires to the identical terminal numbers on the terminal block of each unit.
- Incorrect connection may cause a failure.

For the air conditioner, connect a power wire with the following specifications.

■ Power and Wiring Specifications

Model (RAV-)	GP1103 type	GP1403 type	GP1603 type
Power supply	380-415 V 3N ~ 50 Hz, 380 V 3N ~ 60 Hz		
Maximum running current	13.70 A	13.70 A	15.02 A
Installation fuse rating	20 A	20 A	20 A
Power wire*	5 × 2.5 mm ² or more (H07 RN-F or 60245 IEC 66)		
Indoor/outdoor connecting wires*	4 × 1.5 mm ² or more (H07 RN-F or 60245 IEC 66)		

* Number of wire × wire size

How to wire

1. Connect the indoor/outdoor connecting wires to the terminal as identified with their respective numbers on the terminal block of the indoor and outdoor units. H07 RN-F or 60245 IEC 66 (1.5 mm² or more)
2. When connecting the connecting wire to the outdoor unit terminal, prevent water from coming into the outdoor unit.
3. Secure the power supply wire and indoor/outdoor connecting wires using the cord clamp of the outdoor unit.
4. For interconnecting wires, do not use a wire joined to another on the way.
Use wires long enough to cover the entire length.
5. **Wiring connections differ in conformance to EMC standards, depending whether the system is twin, triple or double twin. Connect wires according to respective instructions.**


CAUTION

- Fuse must be used in installation for the power supply line of this air conditioner.
- Incorrect/incomplete wiring may lead to an electrical fire or smoke.
- Prepare an exclusive power supply for the air conditioner.
- This product can be connected to the mains power.
Fixed wire connections:
A switch that disconnects all poles and has a contact separation of at least 3 mm must be incorporated in the fixed wiring.


Wiring diagram

* For details on the remote controller wiring/installation, refer to the Installation Manual enclosed with the remote controller.


Single system

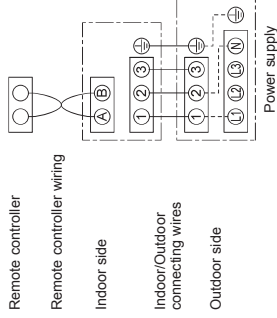

Simultaneous twin system

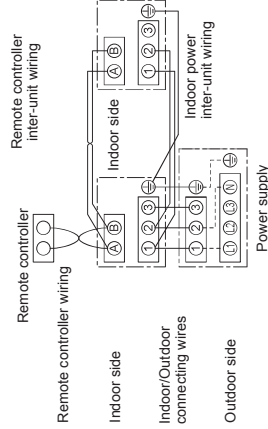



Simultaneous triple and double twin system

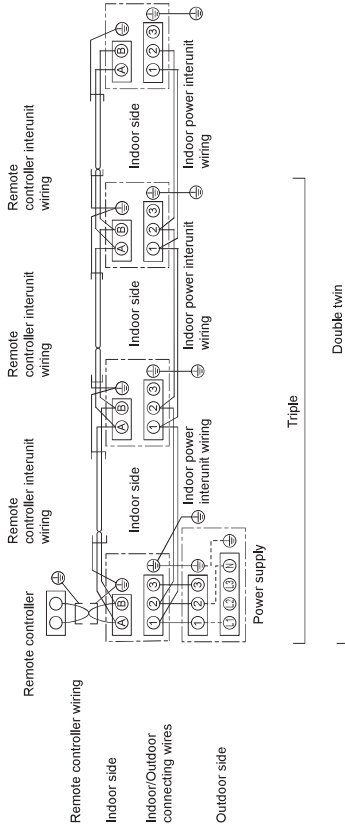

* Use 2-core shield wire (MVVS 0.5 to 2.0 mm² or more) for the remote controller wiring in the simultaneous twin, simultaneous triple and simultaneous double twin systems to prevent noise problems. Be sure to connect both ends of the shield wire to earth leads.

* Connect earth wires for each indoor unit in the simultaneous twin, simultaneous triple and simultaneous double twin systems.

Stripping length power cord and connecting wire

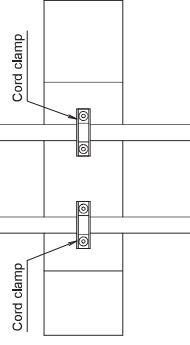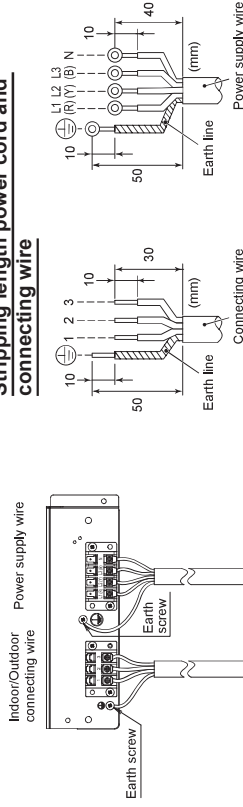

7 Earthing



Be sure to connect the earth wire. (Grounding work)
Incomplete earthing may cause an electric shock.

Connect the earth wire properly following applicable technical standards.
Connecting the earth wire is essential to preventing electric shock and to reducing noise and electrical charges on the outdoor unit surface due to the high-frequency wave generated by the frequency converter (inverter) in the outdoor unit.
If you touch the charged outdoor unit without an earth wire, you may experience an electric shock.

8 Finishing

After the refrigerant pipe, inter-unit wires, and drain pipe have been connected, cover them with finishing tape and clamp them to the wall with off-the-shelf support brackets or their equivalent.
Keep the power wires and system interconnection wires off the valve on the gas side or pipes that have no heat insulator.

9 Test run

- Turn on the leakage breaker at least 12 hours before starting a test run to protect the compressor during startup.
 - Check the compressor, power is supplied from the 380-415 VAC input to the unit to preheat the compressor.
 - Check the following before starting a test run:
 - That all pipes are connected securely without leaks.
 - That the valve of gas and liquid side are full open.
- If the compressor is operated with the valve closed, the outdoor unit will become overpressurized, which may damage the compressor or other components.
If there is a leak at a connection, air can be sucked in and the internal pressure further increases, which may cause a burst or injury.
- Operate the air conditioner in the correct procedure as specified in the Owner's Manual.

10 Annual maintenance

For an air conditioning system that is operated on a regular basis, cleaning and maintenance of the indoor / outdoor units are strongly recommended.
As a general rule, if an indoor unit is operated for about 8 hours daily, the indoor / outdoor units will need to be cleaned at least once every 3 months. This cleaning and maintenance should be carried out by a qualified service person.
Failure to clean the indoor / outdoor units regularly will result in poor performance, icing, water leaking and even compressor failure.

11 Air conditioner operating conditions

For proper performance, operate the air conditioner under the following temperature conditions:

Cooling operation	Dry bulb temp.	-20 °C to 52 °C
Heating operation	Wet bulb temp.	-27 °C to 18 °C

If air conditioner is used outside of the above conditions, safety protection may work.

12 Functions to be implemented locally

■ Handling existing pipe (Refer to 14 Appendix)

When using the existing pipe, carefully check for the following:

- Wall thickness (within the specified range)
- Scratches and dents
- Water, oil, dirt, or dust in the pipe
- Flare looseness and leakage from welds
- Deterioration of copper pipe and heat insulator

Cautions for using existing pipe

- Do not reuse a flare nut to prevent gas leaks.
Replace it with the supplied flare nut and then process it to a flare.
- Blow nitrogen gas or use an appropriate means to keep the inside of the pipe clean. If discolored oil or much residue is discharged, wash the pipe.
- Check welds, if any, on the pipe for gas leaks.

- When the pipe corresponds to any of the following, do not use it. Install a new pipe instead.
- The pipe has been opened (disconnected from indoor unit or outdoor unit) for a long period.
 - The pipe has been connected to an outdoor unit that does not use refrigerant R22, R410A or R407C.
 - The existing pipe must have a wall thickness equal to or larger than the following thicknesses.

Reference outside diameter (mm)	Wall thickness (mm)	Material
6.4	0.8	—
9.5	0.8	—
12.7	0.8	—
15.9	1.0	—
19.1	1.2	—

- Do not use any pipe with a wall thickness less than these thicknesses due to insufficient pressure capacity.


■ Refrigerant recovery

When recovering the refrigerant in situations such as when relocating an indoor unit or outdoor unit, the recovery operation can be performed by operating the SW01 and SW02 switches on the P.C. Board of the outdoor unit. A cover for the electric parts has been installed in order to provide protection from electric shocks while work is being performed. Operate the service switches and check the LED displays with this electric parts cover in place. Do not remove this cover while the power is still on.



The entire P.C. Board of this air conditioner system is a high-voltage area.

When operating the service switches with the power of the system left on, wear electrically insulated gloves.

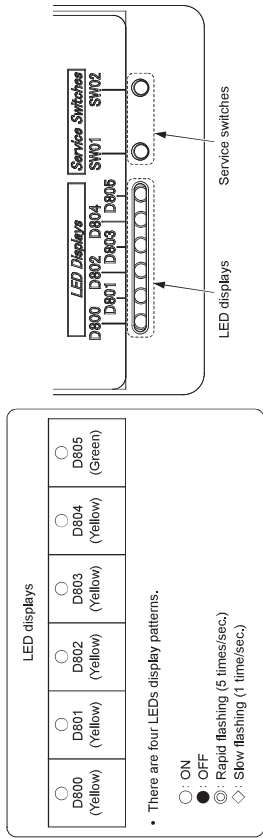

- In the initial LED display status, D805 is lighted as shown on the right. If the initial status is not established (if D805 is flashing), hold down the SW01 and SW02 service switches simultaneously for at least 5 seconds to return the LED displays to the initial status.

LED display initial status

D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)
● or OFF or Rapid flashing	● or ⊙ or OFF or Rapid flashing	● or ⊙ or OFF or Rapid flashing	● or ⊙ or OFF or Rapid flashing	● or ⊙ or OFF or Rapid flashing	○

- * In order to reduce standby power, the LED indication may be turned off even when the power is on. When either SW01 or SW02 is pressed, the LED is displayed.

Steps taken to recover the refrigerant

1. Operate the indoor unit in the fan mode.
2. Check that the LED displays are placed in their initial status. If not, place them in the initial status.
3. Hold down SW01 for at least 5 seconds, and check that D804 flashes slowly. (Fig. 1)
4. Press SW01 once to set the LED displays (D800 to D805) to the "refrigerant recovery LED display" shown below. (Fig. 2)

(Fig. 1)

LED displays indicated when step 3 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

○ : ON, ● : OFF, ◇ : Slow flashing

(Fig. 2)

Refrigerant recovery LED display					
D800	D801	D802	D803	D804	D805
○	●	●	●	⊙	●

○ : ON, ● : OFF, ⊙ : Rapid flashing

5. Press SW02 to set D805 to rapid flashing. (Each time SW02 is pressed, D805 is switched between rapid flashing and OFF.) (Fig. 3)
6. Hold down SW02 for at least 5 seconds, and when D804 flashes slowly and D805 lights, the forced cooling operation is started. (Max. 10 minutes) (Fig. 4)

(Fig. 3)

LED displays indicated when step 5 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	⊙	⊙

○ : ON, ● : OFF, ⊙ : Rapid flashing

(Fig. 4)

LED displays indicated when step 6 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	○

○ : ON, ● : OFF, ◇ : Slow flashing

7. After operating the system for at least 3 minutes, close the valve on the liquid side.
 8. After the refrigerant has been recovered, close the valve on the gas side.
 9. Hold down SW01 and SW02 simultaneously for at least 5 seconds. The LED displays are returned to the initial status, and the cooling operation and indoor fan operation stop.
 10. Turn off the power.
- * If there is any reason to doubt whether the recovery was successful in the course of this operation, hold down SW01 and SW02 simultaneously for at least 5 seconds to return to the initial status, and then repeat the steps for recovering the refrigerant.

Existing piping

The follow setting are required when using a pipe Ø19,1 mm as the existing piping at the gas pipe side.

Steps taken to support existing piping

1. Set the circuit breaker to the ON position to turn on the power.
2. Check that the LED displays are placed in their initial status. If not, place them in the initial status.
3. Hold down SW01 for at least 5 seconds, and check that D804 flashes slowly, (Fig. 5)
4. Press SW01 four times to set the LED displays (D800 to D805) to the "LED displays for existing piping settings" shown below. (Fig. 6)

(Fig. 5)

LED displays indicated when step 3 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

○ : ON, ● : OFF, ◇ : Slow flashing

(Fig. 6)

LED displays for existing piping settings					
D800	D801	D802	D803	D804	D805
●	●	●	○	◎	●

○ : ON, ● : OFF, ◎ : Rapid flashing

5. Press SW02 to set D805 to rapid flashing. (Each time SW02 is pressed, D805 is switched between rapid flashing and OFF.) (Fig. 7)
6. Hold down SW02 for at least 5 seconds, and check that D804 flashes slowly and that D805 lights, (Fig. 8)

(Fig. 7)

LED displays indicated when step 5 is taken					
D800	D801	D802	D803	D804	D805
●	●	○	●	◎	◎

○ : ON, ● : OFF, ◎ : Rapid flashing

(Fig. 8)

LED displays indicated when step 6 is taken					
D800	D801	D802	D803	D804	D805
●	●	○	●	◇	○

○ : ON, ● : OFF, ◇ : Slow flashing

7. Hold down SW01 and SW02 simultaneously for at least 5 seconds to return the LED displays to the initial status.

The existing piping is now supported by taking the above steps. In this status, the heating capacity may decrease during heating depending on the outside air temperature and indoor temperature.

- * If there is any reason to doubt whether establishing support was successful in the course of this operation, hold down SW01 and SW02 simultaneously for at least 5 seconds to return to the initial status, and then repeat the setting steps.

How to check the existing piping settings

You can check whether the existing piping settings are enabled.

1. Check that the LED displays are placed in their initial status. If not, place them in the initial status.
2. Hold down SW01 for at least 5 seconds, and check that D804 flashes slowly, (Fig. 9)
3. Press SW01 four times to set the LED displays (D800 to D805) to the "LED displays for existing piping settings" shown below. If the setting is enabled, D802 lights and D804 and D805 flash rapidly, (Fig. 10)
4. Hold down SW01 and SW02 simultaneously for at least 5 seconds to return the LED displays to the initial status.

(Fig. 9)

LED displays indicated when step 3 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

○ : ON, ● : OFF, ◇ : Slow flashing

(Fig. 10)

LED displays for existing piping settings					
D800	D801	D802	D803	D804	D805
●	●	○	●	◎	◎

○ : ON, ● : OFF, ◎ : Rapid flashing

When restoring the factory defaults

To restore the factory defaults in situations such as when relocating the units, follow the steps below.

1. Check that the LED displays are placed in their initial status. If not, place them in the initial status.
2. Hold down SW01 for at least 5 seconds, and check that D804 flashes slowly, (Fig. 11)
3. Press SW01 20 times to set the LED displays (D800 to D805) to the "LED displays restored to factory defaults" shown below, (Fig. 12)

(Fig. 11)

LED displays indicated when step 2 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

○ : ON, ● : OFF, ◇ : Slow flashing

(Fig. 12)

LED displays restored to factory defaults					
D800	D801	D802	D803	D804	D805
●	●	●	●	◎	●

○ : ON, ● : OFF, ◎ : Rapid flashing

4. Hold down SW02 for at least 5 seconds, and check that D804 flashes slowly, (Fig. 13)
5. Hold down SW01 and SW02 simultaneously for at least 5 seconds to return the LED displays to the initial status.

(Fig. 13)

LED displays indicated when step 4 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

○ : ON, ● : OFF, ◇ : Slow flashing

■ Snow guard fan control

Steps taken to enable snow guard fan control

1. Set the circuit breaker to the ON position to turn on the power.
2. Check that the LED displays are placed in their initial status. If not, place them in the initial status.
3. Hold down SW01 for at least 5 seconds, and check that D804 flashes slowly. (Fig. 14)
4. Press SW01 twice to set the LED displays (D800 to D805) to the "LED displays for snow guard fan control" shown below. (Fig. 15)

(Fig. 14)

LED displays indicated when step 3 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

○: ON, ●: OFF, ◇: Slow flashing

(Fig. 15)

LED displays for snow guard fan control					
D800	D801	D802	D803	D804	D805
●	○	●	●	●	●

○: ON, ●: OFF, ◎: Rapid flashing

5. Press SW02 to set D805 to rapid flashing. (Each time SW02 is pressed, D805 is switched between rapid flashing and OFF.) (Fig. 16)
6. Hold down SW02 for at least 5 seconds, and check that D804 flashes slowly and that D805 lights. (Fig. 17)

(Fig. 16)

LED displays indicated when step 5 is taken					
D800	D801	D802	D803	D804	D805
●	○	●	●	◎	◎

○: ON, ●: OFF, ◎: Rapid flashing

(Fig. 17)

LED displays indicated when step 6 is taken					
D800	D801	D802	D803	D804	D805
●	○	●	●	◇	○

○: ON, ●: OFF, ◇: Slow flashing

7. Hold down SW01 and SW02 simultaneously for at least 5 seconds to return the LED displays to the initial status.

The snow guard fan control is now supported by taking the above steps. In this status, even when the compressor is not in use but TO sensor is lower than 4 °C, outdoor unit fan will move with specified revolution to protect fan motor.

- * If there is any reason to doubt whether establishing support was successful in the course of this operation, hold down SW01 and SW02 simultaneously for at least 5 seconds to return to the initial status, and then repeat the setting steps.

How to check the snow guard fan control

You can check whether the snow guard fan control are enabled.

1. Check that the LED displays are placed in their initial status. If not, place them in the initial status.
2. Hold down SW01 for at least 5 seconds, and check that D804 flashes slowly. (Fig. 18)
3. Press SW01 twice to set the LED displays (D800 to D805) to the "LED displays for snow guard fan control" shown below. If the setting is enabled, D801 lights and D804 and D805 flash rapidly. (Fig. 19)
4. Hold down SW01 and SW02 simultaneously for at least 5 seconds to return the LED displays to the initial status.

(Fig. 18)

LED displays indicated when step 3 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

○: ON, ●: OFF, ◇: Slow flashing

(Fig. 19)

LED displays for snow guard fan control					
D800	D801	D802	D803	D804	D805
●	○	●	●	◎	◎

○: ON, ●: OFF, ◎: Rapid flashing

When restoring the factory defaults

To restore the factory defaults in situations such as when relocating the units, follow the steps below.

1. Check that the LED displays are placed in their initial status. If not, place them in the initial status.
2. Hold down SW01 for at least 5 seconds, and check that D804 flashes slowly. (Fig. 20)
3. Push SW01 several times until the LED reaching to the "LED displays restored to factory defaults" shown below. (Fig. 21)

(Fig. 20)

LED displays indicated when step 2 is taken					
D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

○: ON, ●: OFF, ◇: Slow flashing

(Fig. 21)

LED displays restored to factory defaults					
D800	D801	D802	D803	D804	D805
●	●	●	●	◎	●

○: ON, ●: OFF, ◎: Rapid flashing

4. Hold down SW02 for at least 5 seconds, and check that D804 flashes slowly. (Fig. 22)
5. Hold down SW01 and SW02 simultaneously for at least 5 seconds to return the LED displays to the initial status.

(Fig. 22)

LED displays indicated when step 4 is taken					
D800	D801	D802	D803	D804	D805
●	●	●	●	◇	●

○: ON, ●: OFF, ◇: Slow flashing

■ Night operation (Sound reduction)

- The air conditioner can be used in Night operation (Sound reduction) mode by connecting a commercially available timer (to be procured locally) and a separately sold option "Optional connector Cable (TCB-KBOS4P-E1)". For details, refer to the operating instructions for the separately sold option "Optional connector Cable".
- The air conditioner can be operated in capacity saving mode to reduce the operation noise at night.
- Performance may lower depending on the outdoor air temperature, etc.

■ How to set the noise level in Night operation (Sound reduction) mode

You can set DIP switches to select the noise level in Night operation (Sound reduction) mode (*1) (*2).

1. Referring to the table below, set the DIP switches for the desired noise level.


(*1) Night Operation limits the outdoor fan and compressor revolution speed, leading to a decrease in capacity.

(*2) Depending on the remote controller to be connected, the same setting can be made from the remote controller.

For details, refer to the Installation Manual of the remote controller. If different level settings are set from both the Option P.C. Board and the remote controller the quieter setting is prioritized.

(*3) The Option P.C. Board is already installed in the unit.

Option P.C. Board

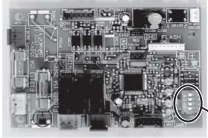

DIP switches (SW01)

Noise level	SW01 setting (*4)
level 1	ON 1 2 3 4
level 2	ON 1 2 3 4
level 3	ON 1 2 3 4

(*4) Don't do any switch settings except above. It would be the cause of the malfunction.

13 Troubleshooting


You can perform fault diagnosis of the outdoor unit with the LEDs on the P.C. Board of the outdoor unit in addition to using the check codes displayed on the wired remote controller of the indoor unit.

Use the LEDs and check codes for various checks. Details of the check codes displayed on the wired remote controller of the indoor unit are described in the Installation Manual of the indoor unit.


LED displays and check codes

No.	Error	Display							
		D800	D801	D802	D803	D804	D805		
1	Normal	●	●	●	●	●	●		
2	Discharge temperature sensor (TD) error	○	○	●	●	●	○		
3	Heat exchanger temperature sensor (TE) error	●	●	○	●	●	○		
4	Heat exchanger temperature sensor (TL) error	○	○	●	●	●	○		
5	Outside temperature sensor (TO) error	●	●	○	●	●	○		
6	Suction temperature sensor (TS) error	○	○	○	●	●	○		
7	Heatsink temperature sensor (TH) error	○	○	○	○	●	○		
8	Heat exchanger sensor (TE, TS) connection error	○	○	○	○	○	○		
9	EEPROM error	●	○	●	○	●	○		
10	Compressor breakdown	○	○	○	○	○	○		
11	Compressor lock	○	●	○	○	○	○		
12	Current detection circuit error	○	●	○	○	○	○		
13	Case thermostat activated	●	○	○	○	○	○		
14	Unset model type	●	●	●	●	○	○		
15	Communication error between MCUs	○	●	●	●	○	○		
16	Discharge temperature sensor error	○	○	●	●	○	○		
17	High pressure SW error	○	○	●	●	○	○		
18	Power supply voltage error	○	○	○	○	○	○		
19	Heatsink overheating error	●	○	○	○	○	○		
20	Gas leak detected	○	○	○	○	○	○		
21	4-way valve reversal error	●	●	●	○	○	○		
22	High pressure protective activated	○	●	●	○	○	○		
23	Fan system error	●	○	○	○	○	○		
24	Compressor driver device short circuit	○	○	○	○	○	○		
25	Position detection circuit error	●	●	○	○	○	○		

○ : ON, ● : OFF, ○ : Rapid flashing (5 times/sec.)

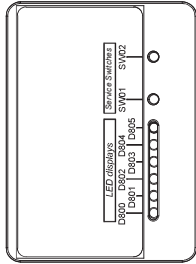

* The LEDs and switches are located at the Sub P.C. Board of the outdoor unit as shown in the figure on the left.



14 Appendix

[1] Existing piping

Work instructions

The existing R22 and R407C piping can be reused for our digital inverter R32 product installations.

WARNING

Confirming the existence of scratches or dents on the existing pipes and confirming the reliability of the pipe strength are conventionally referred to the local site.

If the specified conditions can be cleared, it is possible to update existing R22 and R407C pipes to those for R32 models.

Basic conditions needed to reuse existing pipes

Check and observe the presence of three conditions in the refrigerant piping works.

1. Dry (There is no moisture inside of the pipes.)
2. Clean (There is no dust inside of the pipes.)
3. Tight (There are no refrigerant leaks.)

Restrictions for use of existing pipes

In the following cases, the existing pipes should not be reused as they are. Clean the existing pipes or exchange them with new pipes.

1. When a scratch or dent is heavy, be sure to use new pipes for the refrigerant piping works.
2. When the existing pipe thickness is thinner than the specified "Pipe diameter and thickness," be sure to use new pipes for the refrigerant piping works.
- The operating pressure of R32 is high. If there is a scratch or dent on the pipe or a thinner pipe is used, the pressure strength may be inadequate, which may cause the pipe to break in the worst case.

* Pipe diameter and thickness (mm)

Reference outside diameter (mm)	Wall thickness (mm)	Material
6.4	0.8	—
9.5	0.8	—
12.7	0.8	—
15.9	1.0	—
19.1	1.2	—

- In case the pipe diameter is Ø12.7 mm or less and the thickness is less than 0.7 mm, be sure to use new pipes for the refrigerant piping works.

3. When the outdoor unit was left with the pipes disconnected, or the gas leaked from the pipes and the pipes were not repaired and refilled.
 - There is the possibility of rain water or air, including moisture, entering the pipe.
4. When refrigerant cannot be recovered using a refrigerant recovery unit.
 - There is the possibility that a large quantity of dirty oil or moisture remains inside the pipes.
5. When a commercially available dryer is attached to the existing pipes.
 - There is the possibility that copper green rust has been generated.
6. When the existing air conditioner is removed after refrigerant has been recovered.
 - Check if the oil is judged to be clearly different from normal oil.
 - The refrigerator oil is copper rust green in color: There is the possibility that moisture has mixed with the oil and rust has been generated inside the pipe.
 - There is discolored oil, a large quantity of residue, or a bad smell.
 - A large quantity of shiny metal dust or other wear residue can be seen in the refrigerant oil.
7. When the air conditioner has a history of the compressor failing and being replaced.
 - When discolored oil, a large quantity of residue, shiny metal dust, or other wear residue or mixture of foreign matter is observed, trouble will occur.
8. When temporary installation and removal of the air conditioner are repeated such as when leased etc.
9. If the type of refrigerant oil of the existing air conditioner is other than the following oil (Mineral oil), Suniso, Freol-S, MS (Synthetic oil), alkyl benzene (HAB, Barrel-freeze), ester series, PVE only of other series.
 - The winding-insulation of the compressor may deteriorate.

NOTE

The above descriptions are results have been confirmed by our company and represent our views on our air conditioners, but do not guarantee the use of the existing pipes of air conditioners that have adopted R32 in other companies.

Branching pipe for simultaneous operation system

In the concurrent twin system, when has specified that branching pipe is to be used, it can be reused.

Branching pipe model name:

RBC-TWP101E, RBC-TRP100E, RBC-DTWP101E

On the existing air conditioner for simultaneous

operation system (twin, triple, double twin system),

there are cases of branch pipes being used that have insufficient compressive strength.


In such case, please change the piping to a branch pipe for R32.

Curing of pipes

When removing and opening the indoor or outdoor unit for a long time, cure the pipes as follows:

- Otherwise rust may be generated when moisture or foreign matter due to condensation enters the pipes.
- The rust cannot be removed by cleaning, and new pipes are necessary.

Placement location	Term	Curing manner
Outdoors	1 month or more	Pinching
Indoors	Less than 1 month Every time	Pinching or taping

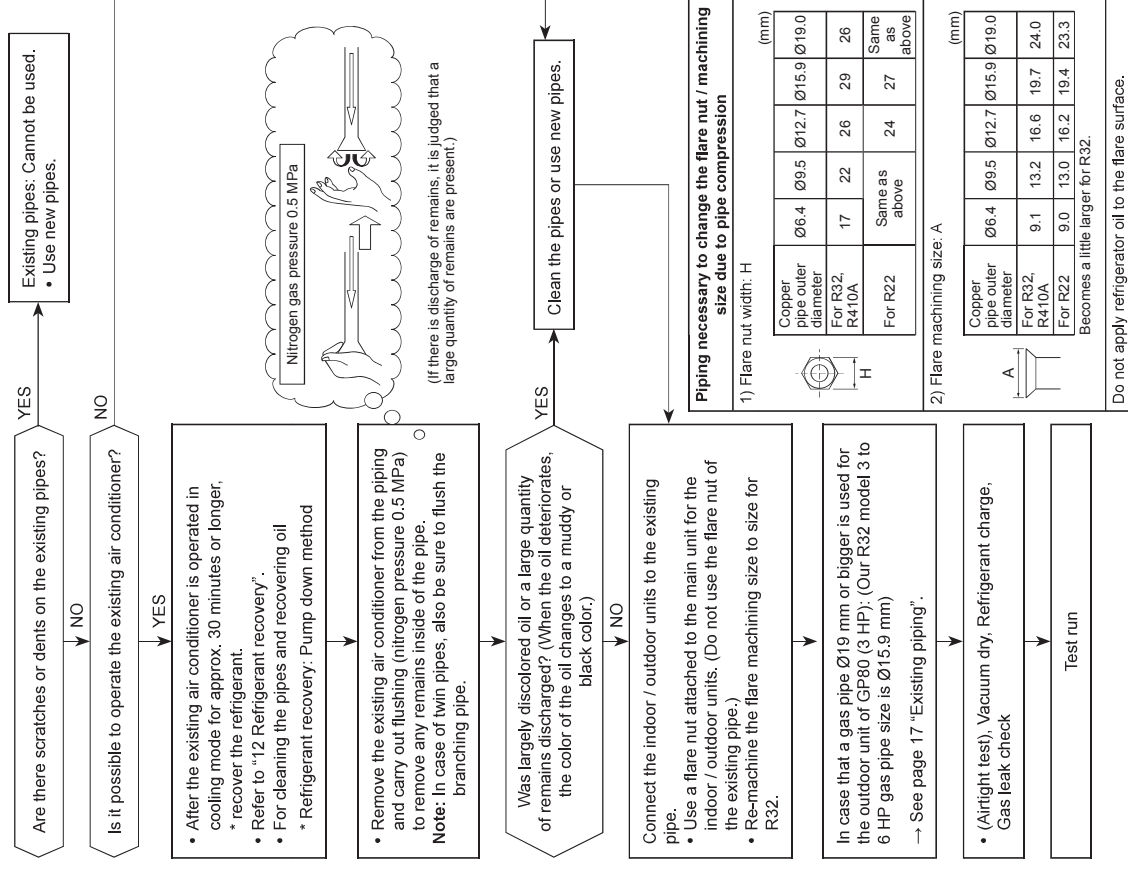

[2] Minimum floor area: $A_{\min}$ (m²)

Total refrigerant quantity*	Floor standing unit	Wall mounted unit	Ceiling mounted unit
h_o	0.6	1.8	2.2
M (kg)	$A_{\min}$ (m²)		
3.300	93.442	10.382	6.950
3.335	95.435	10.604	7.098
3.370	97.448	10.828	7.248
3.405	99.483	11.054	7.400
3.440	101.539	11.282	7.552
3.475	103.615	11.513	7.707
3.510	105.713	11.746	7.863
3.545	107.832	11.981	8.021
3.580	109.971	12.219	8.180
3.615	112.132	12.459	8.340
3.650	114.314	12.702	8.503
3.685	116.517	12.946	8.667
3.720	118.741	13.193	8.832
3.755	120.986	13.443	8.999
3.790	123.252	13.695	9.167
3.825	125.538	13.949	9.338
3.860	127.846	14.205	9.509
3.895	130.175	14.464	9.682
3.930	132.525	14.725	9.857
3.965	134.896	14.988	10.034
4.000	137.288	15.254	10.212
4.035	139.701	15.522	10.391
4.070	142.136	15.793	10.572
4.105	144.591	16.066	10.755
4.140	147.067	16.341	10.939
4.175	149.564	16.618	11.125
4.210	152.082	16.898	11.312
4.245	154.621	17.180	11.501
4.280	157.182	17.465	11.691
4.315	159.763	17.751	11.883
4.350	162.365	18.041	12.077
4.385	164.988	18.332	12.272
4.420	167.633	18.626	12.469
4.455	170.298	18.922	12.667
4.490	172.984	19.220	12.867
4.525	175.692	19.521	13.068
4.560	178.420	19.824	13.271

GP1103
GP1403


43-EN

Total refrigerant quantity*	Floor standing unit	Wall mounted unit	Ceiling mounted unit
h_o	0.6	1.8	2.2
M (kg)	$A_{\min}$ (m²)		
4.595	181.169	20.130	13.475
4.630	183.940	20.438	13.681
4.665	186.731	20.748	13.889
4.700	189.544	21.060	14.098
4.735	192.377	21.375	14.309
4.770	195.232	21.692	14.521
4.805	198.107	22.012	14.735
4.840	201.004	22.334	14.951
4.875	203.922	22.658	15.168
4.910	206.860	22.984	15.386
4.945	209.820	23.313	15.606
4.980	212.800	23.644	15.828
5.015	215.802	23.978	16.051
5.050	218.825	24.314	16.276
5.085	221.869	24.652	16.503
5.120	224.933	24.993	16.731
5.155	228.019	25.335	16.960
5.190	231.126	25.681	17.191
5.225	234.254	26.028	17.424
5.260	237.403	26.378	17.658
5.295	240.572	26.730	17.894
5.330	243.763	27.085	18.131
5.365	246.975	27.442	18.370
5.400	250.208	27.801	18.611
5.435	253.462	28.162	18.853
5.470	256.737	28.526	19.096
5.505	260.033	28.893	19.341
5.540	263.350	29.261	19.588
5.575	266.688	29.632	19.836
5.610	270.047	30.005	20.086
5.645	273.427	30.381	20.338
5.680	276.828	30.759	20.591
5.715	280.250	31.139	20.845
Max.	283.694	31.522	21.101

Charged at factory + Additional refrigerant quantity charged during installation

GP1103
GP1403

44-EN

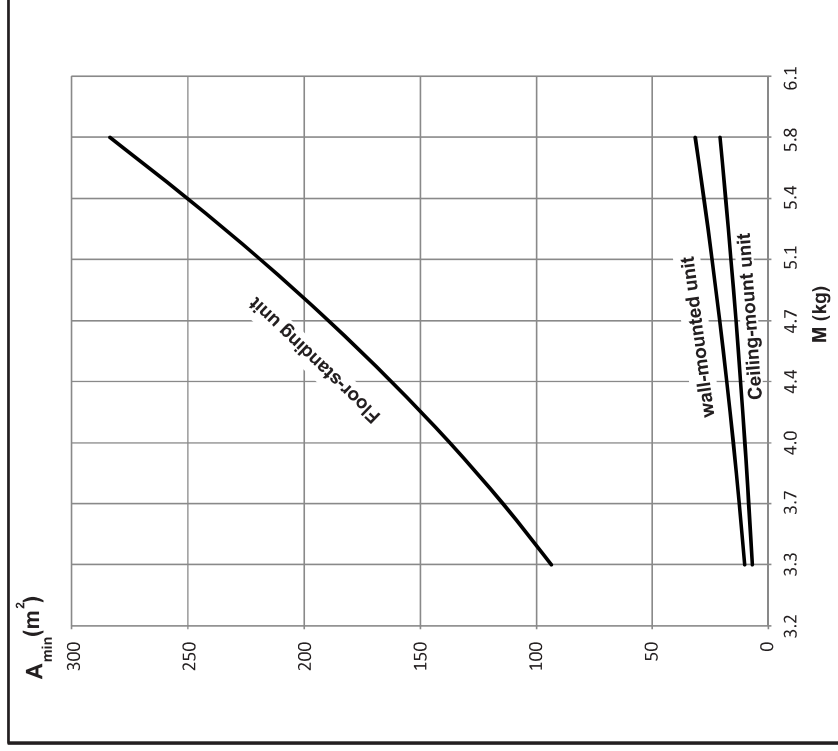

[2] Minimum floor area: $A_{\min}$ (m²)

Total refrigerant quantity*	Floor standing unit	Wall mounted unit	Ceiling mounted unit
h_o	0.6	1.8	2.2
M (kg)	$A_{\min}$ (m²)		
3.500	105.111	11.679	7.818
3.535	107.224	11.914	7.975
3.570	109.358	12.151	8.134
3.605	111.513	12.390	8.294
3.640	113.689	12.632	8.456
3.675	115.885	12.876	8.620
3.710	118.103	13.123	8.785
3.745	120.342	13.371	8.951
3.780	122.602	13.622	9.119
3.815	124.883	13.876	9.289
3.850	127.185	14.132	9.460
3.885	129.508	14.390	9.633
3.920	131.852	14.650	9.807
3.955	134.217	14.913	9.983
3.990	136.603	15.178	10.161
4.025	139.010	15.446	10.340
4.060	141.438	15.715	10.520
4.095	143.887	15.987	10.702
4.130	146.357	16.262	10.886
4.165	148.848	16.539	11.071
4.200	151.360	16.818	11.258
4.235	153.894	17.099	11.447
4.270	156.448	17.383	11.637
4.305	159.023	17.669	11.828
4.340	161.619	17.958	12.021
4.375	164.237	18.249	12.216
4.410	166.875	18.542	12.412
4.445	169.534	18.837	12.610
4.480	172.215	19.135	12.809
4.515	174.916	19.435	13.010
4.550	177.638	19.738	13.213
4.585	180.382	20.042	13.417
4.620	183.146	20.350	13.622
4.655	185.932	20.659	13.830
4.690	188.738	20.971	14.038
4.725	191.566	21.285	14.249
4.760	194.414	21.602	14.461

GP1603

47-EN


– 24 –

Total refrigerant quantity*	Floor standing unit	Wall mounted unit	Ceiling mounted unit
h_o	0.6	1.8	2.2
M (kg)	$A_{\min}$ (m²)		
4.795	197.284	21.920	14.674
4.830	200.174	22.242	14.889
4.865	203.086	22.565	15.106
4.900	206.018	22.891	15.324
4.935	208.972	23.219	15.543
4.970	211.947	23.550	15.765
5.005	214.942	23.882	15.987
5.040	217.959	24.218	16.212
5.075	220.997	24.555	16.438
5.110	224.056	24.895	16.665
5.145	227.135	25.237	16.894
5.180	230.236	25.582	17.125
5.215	233.358	25.929	17.357
5.250	236.501	26.278	17.591
5.285	239.665	26.629	17.826
5.320	242.849	26.983	18.063
5.355	246.055	27.339	18.302
5.390	249.282	27.698	18.542
5.425	252.530	28.059	18.783
5.460	255.799	28.422	19.026
5.495	259.089	28.788	19.271
5.530	262.400	29.156	19.517
5.565	265.732	29.526	19.765
5.600	269.085	29.898	20.015
5.635	272.459	30.273	20.266
5.670	275.854	30.650	20.518
5.705	279.271	31.030	20.772
5.740	282.708	31.412	21.028
5.775	286.166	31.796	21.285
5.810	289.645	32.183	21.544
5.845	293.145	32.572	21.804
5.880	296.667	32.963	22.066
5.915	300.209	33.357	22.330
Max.	303.772	33.752	22.595

GP1603

Charged at factory + Additional refrigerant quantity charged during installation

48-EN

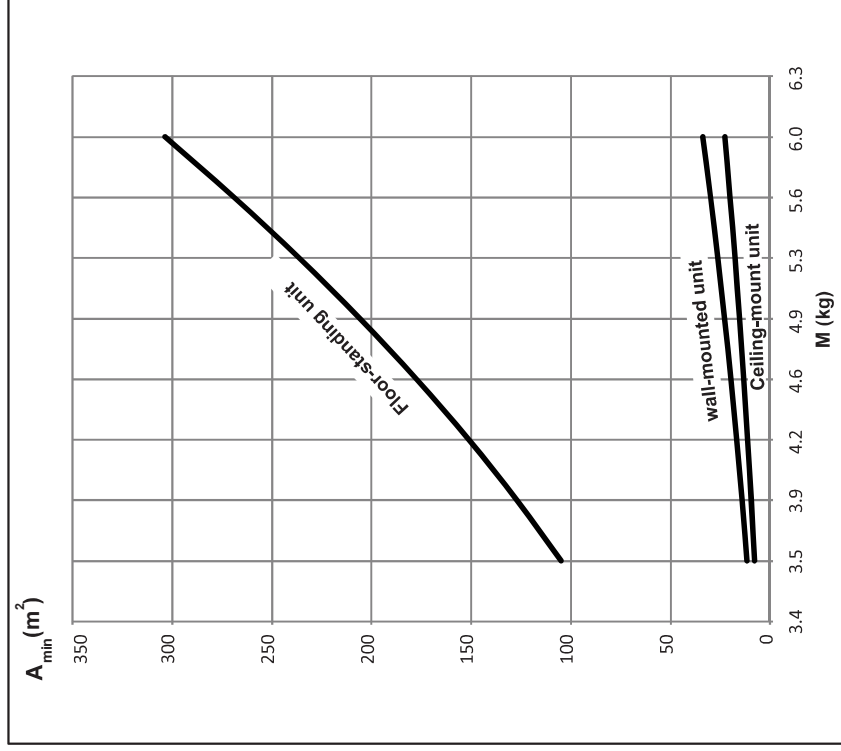

15 Specifications

Model	Sound pressure level (dB(A))		Weight (kg)
	Cooling	Heating	
RAV-GP1103AT8P-E	*	*	126
RAV-GP1403AT8P-E	*	*	126
RAV-GP1603AT8P-E	*	*	127

* Under 70 dB(A)

Product information of ecodesign requirements. (Regulation (EU) 2016/2281)
<http://ecodesign.toshiba-airconditioning.eu/en>

Declaration of conformity

Manufacturer: CARRIER AIR CONDITIONING (THAILAND) CO., LTD.
144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI,
AMPHUR MUANGPATHUMTHANI, PATHUMTHANI 12000, THAILAND

TCF holder: Carrier RLC Europe S.A.S
Immeuble Le Cristalia 3 rue Joseph Monier
92500 Rueil-Malmaison FRANCE

Hereby declares that the machinery described below:

Generic Denomination: Air Conditioner

Model / type: RAV-GP1103AT8P-E
RAV-GP1403AT8P-E
RAV-GP1603AT8P-E

Commercial name: Super Digital Inverter Series Air Conditioner

Complies with the provisions of the Machinery Directive (Directive 2006/42/EC) and the regulations transposing into national law

Name: Ekkajak Laksanasamrith
Position: Senior Manager, Quality Assurance Dept.
Date: 27 Apr, 2026
Place Issued: Thailand

NOTE

This declaration becomes invalid if technical or operational modifications are introduced without the manufacturer's consent.

Declaration of conformity

Manufacturer: CARRIER AIR CONDITIONING (THAILAND) CO., LTD.
144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI,
AMPHUR MUANGPATHUMTHANI, PATHUMTHANI 12000, THAILAND

TCF holder: Carrier Solutions UK Ltd.
Porsham Close, Belliver Industrial Estate,
PLYMOUTH, Devon,
PL6 7DB, United Kingdom

Hereby declares that the machinery described below:

Generic Denomination: Air Conditioner

Model / type: RAV-GP1103AT8P-E
RAV-GP1403AT8P-E
RAV-GP1603AT8P-E

Commercial name: Super Digital Inverter Series Air Conditioner

Complies with the provisions of the Supply of Machinery (Safety) Regulations 2008

Name: Ekkalak Laksanasamrith
Position: Senior Manager, Quality Assurance Dept.
Date: 27 Apr. 2026
Place Issued: Thailand

NOTE

This declaration becomes invalid if technical or operational modifications are introduced without the manufacturer's consent.

Warnings on refrigerant leakage

Check of concentration limit

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its concentration will not exceed a set limit.

The refrigerant R32 which is used in the air conditioner is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws to be imposed which protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its concentration should rise excessively. Suffocation from leakage of R32 is almost non-existent.

If a conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its concentration does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the concentration may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device.
The concentration is as given below.

$$\frac{\text{Total amount of refrigerant (kg)}}{\text{Min. volume of the indoor unit installed room (m}^3\text{)}} \leq \text{Concentration limit (kg/m}^3\text{)}$$

Refrigerant Concentration Limit shall be in accordance with local regulations.

16 Installation check list

After finishing installation work, please check items below and hand this sheet to user to keep it in a safe place together with Owner and Installation Manuals

Model name _____

Check date _____

Checked by _____

Note : Please put a mark “ ✓ ” in the box you checked.

■ Piping work

Check items	Symptom	Check
Connecting pipes are cleaned and no dent	Insufficient Air conditioner capacity Compressor malfunction Compressor rupture or Burst	
Use vacuum pump for completed vacuuming		
No any gas leakage or clogging is found		
Service valves are fully open before operation		

■ Wiring work

Check items	Symptom	Check
Electrical wires are connected correctly	Burnt out, No operation	
Use breaker to connect to main power supply	Burnt out, No abnormal protection	
Wiring insulators are in good condition	Burnt out, Electrical leakage	
Use the specified size/rating wires	Burnt out	
Ground wire must be Installation per manufacturing Installation Manual	Electrical leakage or shock	

■ Drainage work

Check items	Symptom	Check
Drain hose is properly connected	Water leakage or dropping	
Drain hose is well insulated	Water or dew dropping	

Remark : All check items, please refer procedure from manufacturing Installation Manual.

MEMO

[illegible]



CARRIER AIR CONDITIONING (THAILAND) CO., LTD.

144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI, AMPHUR MUANGPATHUMTHANI, PATHUMTHANI 12000, THAILAND



1135801001